


VISTA PRO




PLANNING

Installation Dimensions(mm)


NL=Nominal Slide Length Soft close slides LT=NL+3
 LT=Internal Cabinet Depth Push-open slides LT=NL+12

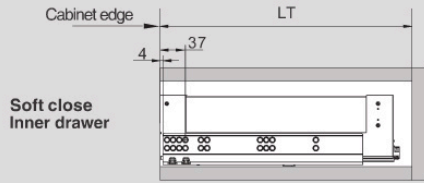

Fixing Hole Position for Push-open Inner Drawer(mm)

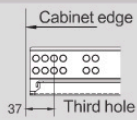

Screw Positions of the Slides(mm)

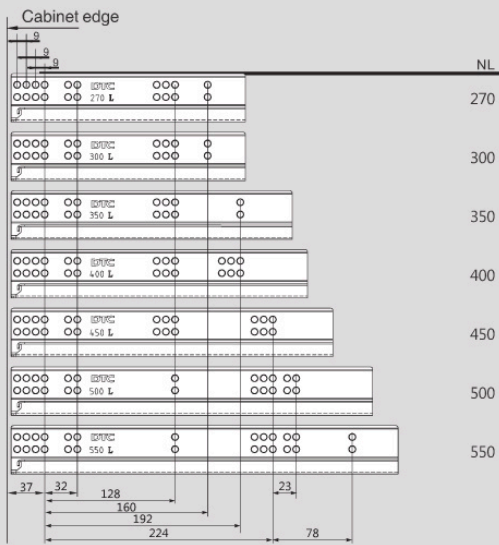


Cabinet Configuration

Cabinet widths/KB(mm)	Push-open drawer Synchronization rod	
300	○	○ recommended ● strongly recommended
350	○	
400	○	
450	○	
500	○	
600	○	
800	●	
900	●	
1000	●	
1200	●	



Installation Dimensions(mm)

LW=Internal Cabinet Width

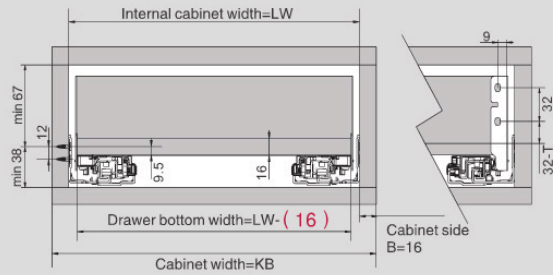


Front Panel, Back and Bottom Dimensions(mm)

Front panel

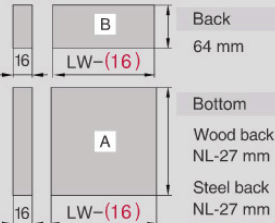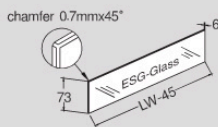

KB Cabinet width
 LW Internal cabinet width
 NL Nominal length

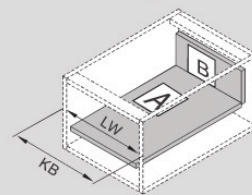

Dimensions(mm)

Glass-boxside

